

## MIDI docs

# The MBSEQ\_HW.V4 File

[Forum Discussion Thread](#) - for comments, corrections, or questions about this article

This file contains configuration information about your SEQ's hardware - button, LED, and encoder assignments, some low level settings, etc. This file has to be in the root of your SD Card in order for the Wilba Frontpanel to work, because without this file, the SEQ core won't know anything about the buttons and LEDs on your frontpanel.

The MBSEQ\_HW.V4 file is actually pretty well self-documented. If you want to understand it, read through the example MBSEQ\_HW.V4 files available in [this directory](#) in the [MIOS Subversion Repository](#).

Buttons, encoders, and LEDs are assigned in this file by specifying the Shift Register (the 74HC165 IC chips on your PCB) and Pin to which they are attached.

## Config File for the Wilba Frontpanel

If you've just built a MIDIbox and all you want is for your Wilba Frontpanel to work, then you really don't need to understand this file. [Here is a standard MBSEQ\\_HW.V4 file](#) for the Wilba Frontpanel. Just make sure that file exists in your SD Card root.

## Example MBSEQ\_HW.V4 files

- **[For the standard SEQ V4](#)** - This is not the Wilba Frontpanel - it's the "traditional" frontpanel referred to on [this page](#).
- **[For the Wilba Frontpanel](#)**
- **[For the Wilba Frontpanel with a TPD module attached](#)**

## Adding Modules to Your SEQ

Some modules, like the [TPD \(Track Position Display\) module](#), the [AOUT\\_NG module](#) (provides CV outs), and the hardware [Button LED Matrix \(BLM\)](#) require amendments to the MBSEQ\_HW.V4 file. To learn a bit about how this works, see, for example, the configuration documentation on [this page](#) about the [TPD module](#).

From:  
<http://www.midibox.org/dokuwiki/> - MIDIbox

Permanent link:  
<http://www.midibox.org/dokuwiki/doku.php?id=mididocs:seq:hardwareconfig&rev=1411004802>

Last update: 2014/09/18 01:46



