

## Display and Menu

The LCD is a standard 2x20 HD44780 display.  
All parameters are shown in one view.

```
C 1 B4 MC4 BC3 BPM *  
B*140 P01 1: 1: 0
```

### Menu navigation

The current menu position is indicated by characters 16,17 & 18 on the top line of the display. Note that in version 0\_2 the default has changed to the Recall function, see below.

**BPM** Allows the BPM to be changed

**Bar** Change the number of beats to a bar

**MC** Metronome measure note

**MC4** C4 default **MCF** Metronome output disabled when MCF is displayed

**BC** Metronome beat note

**BC3** C3 default

**Ch** Midi channel selection for the metronome output

**Clk** Midi clock on/off

**B\*** When the clock is active the BPM display on line 2 is shown like this B\*140.

**B** When the clock is not active it is shown like this B 140

### Memory (Preset) navigation

32 preset locations are available for user programs. These presets can be selected using the encoder knob while in the WRT or Rcl menu options.

**P01** Indicates which program is selected.

**Rcl** Recall a preset from memory, presets are automatically loaded when selected. Default menu location

**WRT** Write a preset to memory when the STORE button is pressed

**CLR** Clear all memory locations and reset to default values when the CLEAR button is pressed, once pressed, turn the unit off and then on again. The power cycle will ensure all defaults are loaded correctly.