

# Coil Winder

**REAL:**



## Triggermatrix 4

### CODE, FIRMWARE

Install [MIOS Studio](#), connect a Core-Stm32F4 via USB, and Start the STUDIO

**1. Upload [MIOS BOOTLOADER](#)**

**2. (only needet for Virgin Machines) type following commands into the MIOS-TERMINAL:**

- set lcd\_type GLCD\_SSD1306\_ROTATED
- set lcd\_num\_x 2
- set lcd\_num\_y 1
- set lcd\_width 128
- set lcd\_height 64
- store

**3. Unzip [the Firmware](#), and Upload the project.hex**

**4. Unconnect USB & Connect the USB again — finished.**

5. If the Machine is not detected by mios studio, and you already checked the usb-connections, the device or the code is broken, for that you may search for “Bootload Switch”, please set it to “bLOAD”, now you can upload new & unbroken codes, dont forget to set it to “normal” back again - after upload new code - else the APP will not boot...

# BUILD

## Shemata



## Community users working on it

- **Phatline** = Programming, Documentation, Hardware-Prototype, Testing, Winding

## Getting Involved ?

Just let a Private message on the forum to user already involved

From:

<https://www.midibox.org/dokuwiki/> - **MIDIbox**

Permanent link:

<https://www.midibox.org/dokuwiki/doku.php?id=coilwinder&rev=1680466043>

Last update: **2023/04/02 20:07**

