

DIN module is used to connect buttons and encoders to the Midibox.

- [DIN Module](#) <sup>uCApps</sup>
- [DIN & DOUT Pintable](#)
- [Encoders](#)

## Troubleshooting

### Testing all pins

Regardless which MIDibox you are planning to build, you can use the MIDIO128 application in order to test the digital inputs of the DIN module(s)

Once MIOS and the MIDIO128 application have been uploaded, each digital input will send a Note On event when a button is pressed (=0V at the digital input pin), and a Note Off event when the button is released (=5V at the digital input pin). Rotary encoders will send two Notes (because they are connected to two pins) depending on the quadrature state.

Each pin will trigger an individual note number. This is the second byte of a Note event. The first pin will send "90 00 7F" when pressed, and "90 00 00" when released. The last 128th pin will send "90 7F 7F" when pressed, and "90 7F 00" when released. The MIDI events can be displayed with MIOS Studio or a MIDI monitor (e.g. MIDI-Ox) The [DIN & DOUT Pintable](#) helps to map the hexadecimal numbers to shift register pins.

### If required: Testing Shift Register Connections

If the first input pin of the first shift register (74HC165) triggers all 128 Notes at once, there is probably a problem with the Shift or Register Clock line (SC/RC signal). Both signals are driven by the core module, and they are connected to all shift registers in order to scan the chain. If these signals are not connected, or if they have a short, the core will "see" always the first digital pin, and never the remaining pins of the chain.

If some of the last shift registers cannot be scanned, it is very likely that the SC/RC line is broken, that there is a bad soldering, or similar.

Such types of errors can be located with the `srio_interconnection_test` application, which can be found at the [http://www.ucapps.de/mios\\_download.html](http://www.ucapps.de/mios_download.html). Step by Step instructions for the testing procedure are described in the `main.asm` file

Check:

- the SC/RC output at the core module (J8/J9)
- the SC/RC input of each DINX4 module (J1/J2)
- the LD/CLK input of each 74HC165 (Pin #1 and Pin #2, see [DINX4 schematic](#))

If you notice a short circuit (signals always 0V or 5V, or between these voltage levels), check the cables between the modules and especially your soldering at the bottom of the PCB. Consider also, that a PCB track could be broken or connected with another track (etching imperfection).

Connect each single DINX4 module directly to the core in order to find the bad candidate(s).

If visual checks don't help to detect the short circuit, you could begin with a very drastic, but effective method: cut the failing track in the middle, and check if the short has disappeared. Cutting has to be repeated until you've found the cause for the failure.

Warning: Don't do this too early, this should be the last measure which normally leads to success, but also to a bad looking PCB

From:

<https://www.midibox.org/dokuwiki/> - **MIDIbox**

Permanent link:

[https://www.midibox.org/dokuwiki/doku.php?id=din\\_module&rev=1149637709](https://www.midibox.org/dokuwiki/doku.php?id=din_module&rev=1149637709)

Last update: **2006/10/15 09:35**

