

# BootLoader-Switch

when activated it will force Core32 to bootup in Bootload mode, doesnt matter how buggy your program is...


**you need:**

2x wires

2x 2Pin-Header

On-OFF Switch

**solder this like shown here:**

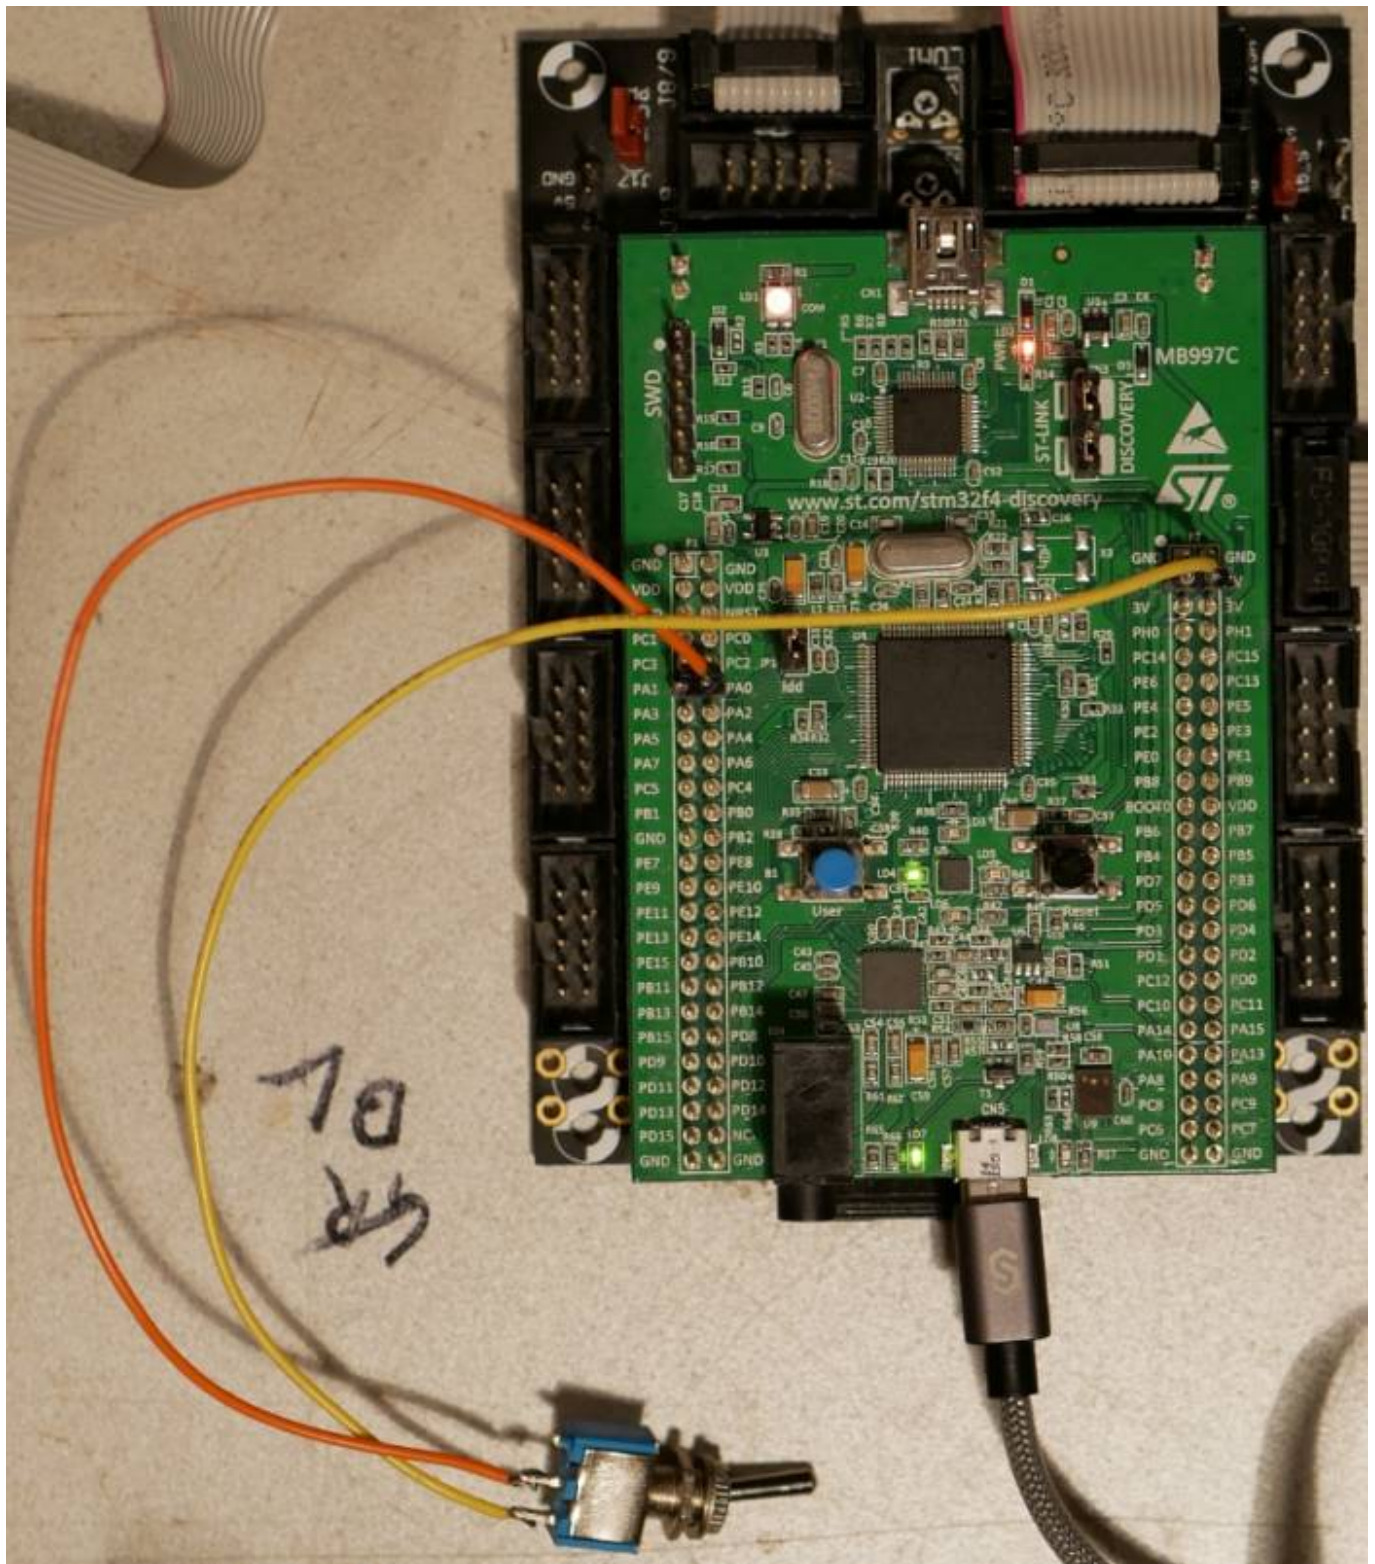

**connect it to following pins:**



you maybe not need this, but when you need it, its good to have such switch on the backside of your midibox (@least when uploading, buggy betas, or you code your own program...)

greetings [Phatline](#)

From:  
<https://www.midibox.org/dokuwiki/> - **MIDIbox**

Permanent link:  
<https://www.midibox.org/dokuwiki/doku.php?id=home:mbhp:module:bootloader-switch&rev=1522616308>

Last update: **2018/04/01 20:58**

