

BootLoader-Switch

when activated it will force Core32 to bootup in Bootload mode, doesnt matter how buggy your program is...


you need:

2x wires

2x 2Pin-Header

On-OFF Switch

solder this like shown here:

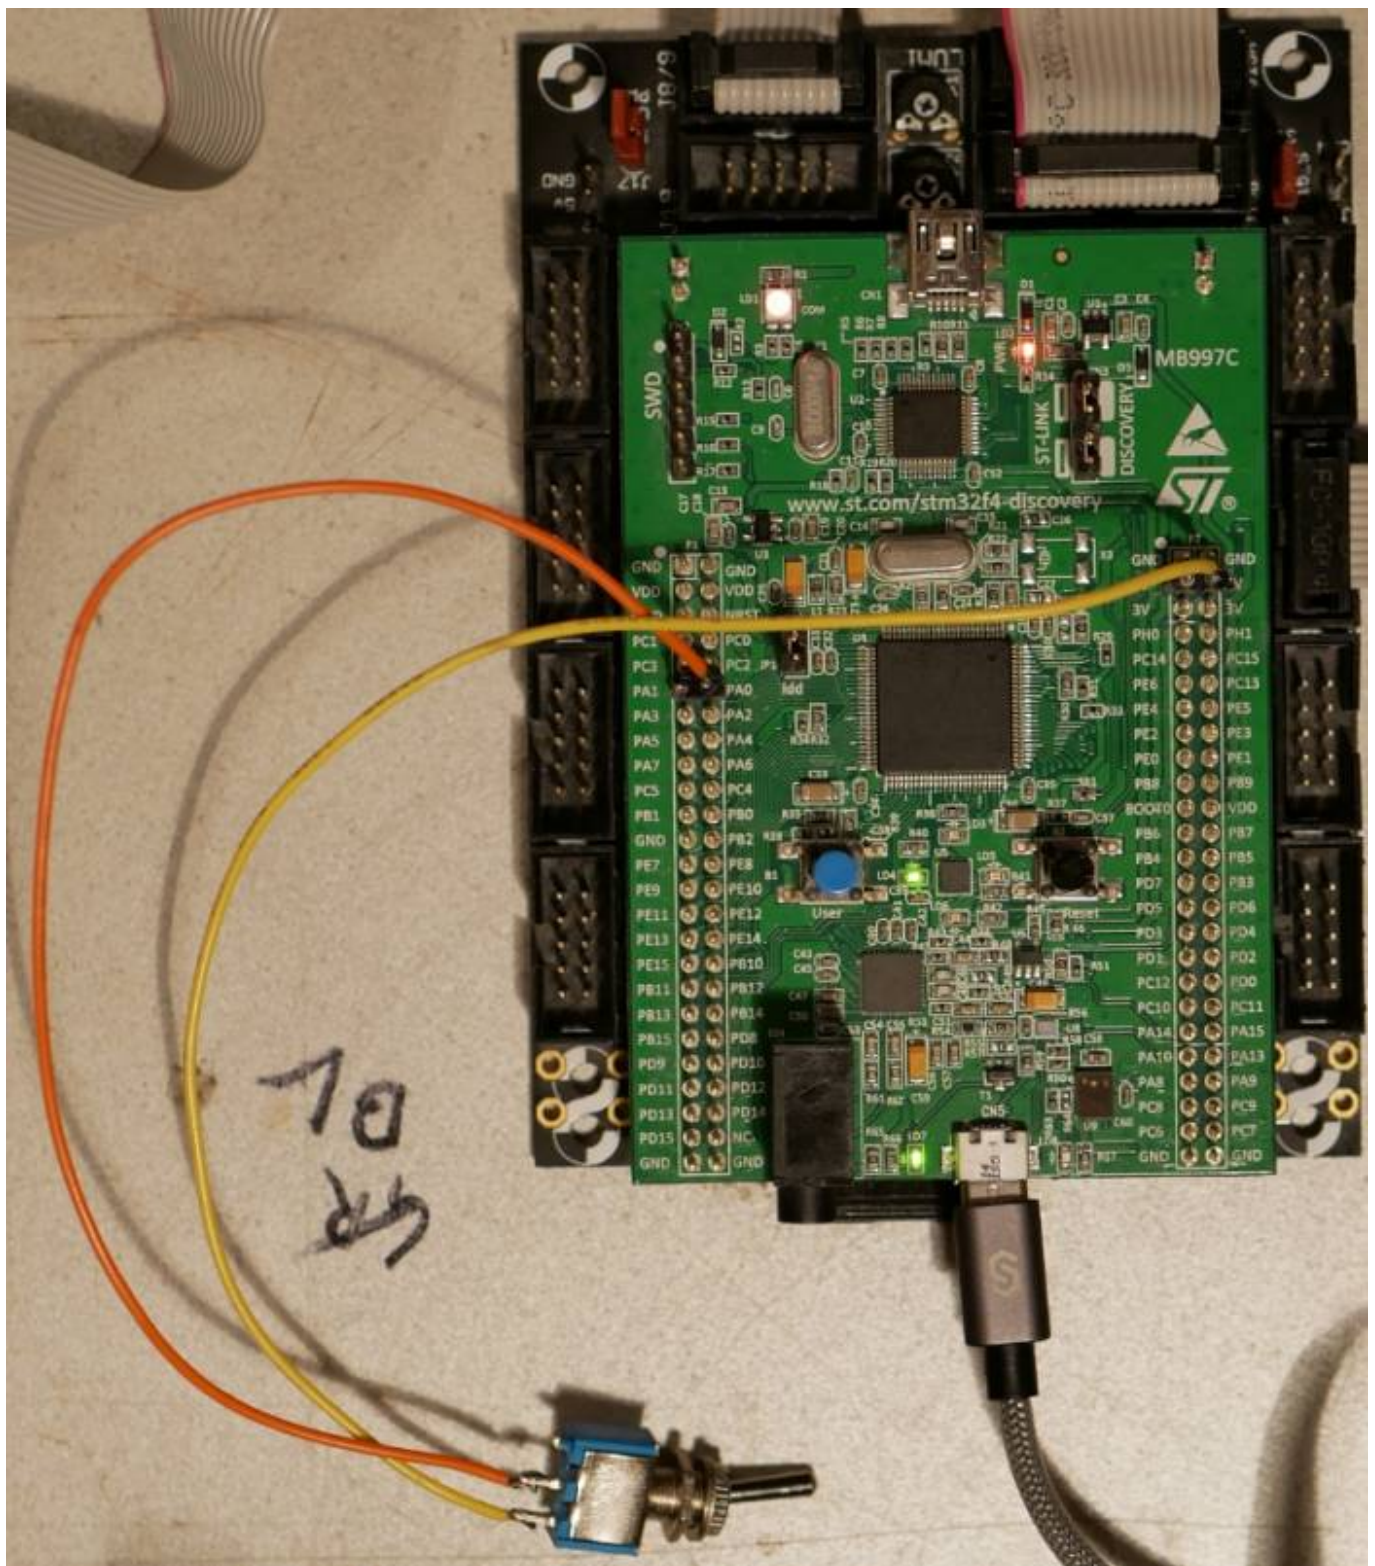

connect it to following pins:



you maybe not need this, but when you need it, its good to have such switch on the backside of your midibox (@least when uploading, buggy betas, or you code your own program...)
greetings - Phatline

From:
<https://www.midibox.org/dokuwiki/> - **MIDIbox**

Permanent link:
<https://www.midibox.org/dokuwiki/doku.php?id=home:mbhp:module:bootloader-switch&rev=1522616390>

Last update: **2018/04/01 20:59**

