

MIDIBox AY 3 8912 - VOLUME MENU

MIDIBox AY 8912 Volume Respectively Amplitude Control:

* Press **F4** (F3 + SHIFT) FOR THE **USER VOLUME** MENU

::.

TONE	USER VALUE	CC7(A)/CC8(B)/CC9(C) MIDI VALUE	VELOCITY	ENVELOPE MODE
	priority 4	priority 3	priority 2	priority 1
VOLUME CH. A	0 to 15	0 to 127 ⇒ coversation to 0-15	ON/OFF	ON/OFF
VOLUME CH. B	0 to 15	0 to 127 ⇒ coversation to 0-15	ON/OFF	ON/OFF
VOLUME CH. C	0 to 15	0 to 127 ⇒ coversation to 0-15	ON/OFF	ON/OFF

::.

VOLUME CH. ABC - USER VALUE

Just adjust the USER VOLUME VALUE here. You'll see no USER VOLUME VALUE if the [VELOCITY] or the [ENVELOPE] mode is activated.

::.

CONTROL CHANGE 7, 8 and 9 (MIDI CC EVENTS)

A CC7 (VOLUME Tone A), CC8 (VOLUME Tone B) and CC9 (VOLUME Tone C) MIDI event overwrites the USER VOLUME VALUE (0-15) directly. But the CC Value will only apply if the VELOCITY and the ENVELOPE mode is off.

The MIDIBox AY 3 8912 CC LIST ⇒ [MIDIBox_AY_3_8912_CC_LIST](#)

::.

ENVELOPE TO TONE ABC ON/OFF (ENVELOPE MODE ON)

There will be a [ENV.ON] @ Tone A or B or C on the User **Volume Control Menu** instead of the user volume value if the ENVELOPE MODE is activated. If the ENVELOPE MODE is in force the Volume Value will be overwritten. For more Information about the ENVELOPE MODE see ⇒ [ENVELOPE \(MENU\)](#)

::.

VELOCITY TO TONE ABC ON/OFF (VELOCITY MODE ON)

If the VELOCITY MODE is activated there will be a [VELOCITY] @ Tone A, B or C on the **User Volume Control Menu** instead of the volume value. In this case the Volume Value will be overwritten by the

VELOCITY Value. Note: if VELOCITY + ENVELOPE Mode is activated the ENVELOPE MODE is in effect.

Press [F7] for the Velocity Menu (toggle Velocity to Volume Tone A, B and C or Noise Period)

:::

MANUAL VOLUME CONTROL

See ⇒ [midibox_ay_3_8912_mixer](#)

:::

[18.11.2008]

From:
<https://www.midibox.org/dokuwiki/> - **MIDIbox**

Permanent link:
https://www.midibox.org/dokuwiki/doku.php?id=midibox_ay_3_8912_volume&rev=1227020271

Last update: **2008/11/18 14:57**

