

The datawheel and 16 Knobs

The datawheel and 16 Knobs are caps, which should be plugged on the 17 rotary encoders.

LTC-Modul

The LTC-Modul is optional and for MIDI IN, 2xMIDI OUT and MIDI THRU Commands or MIDI-TO-COM Mode. It's not necessary for a complete SEQ-Box.

9V PSU

With a special circuit, it should be able to use the 9V PSU from FLOPPY 1541-II.

Bankstick EEPROM

For SEQ the maximum use are 2x 24LC256 or 1x 24LC512. The couple circuit should be built up like description under the menu-point "Bankstick". Details under http://www.ucapps.de/midibox_seq_options.html

LCD Connection

There is a schematic of how to connect 2 LCDs: http://www.ucapps.de/mbhp_lcd.html

Methods you may choose to do that (IDC cable, ribbon cable configuration, etc) are discussed in [this forum thread](#).

From:

<https://www.midibox.org/dokuwiki/> - **MIDIbox**

Permanent link:

<https://www.midibox.org/dokuwiki/doku.php?id=seq&rev=1190308704>

Last update: **2007/09/20 17:19**

