2025/12/13 09:55 1/4 wCoreF4 PCB


wCoreF4 PCB

This is the carrier board for the Waveshare Core407v. It performs breakout functions of all of the standard ports as per the design based on the STM32 Discovery.

Schematic


The circuit is mostly identical to what was drawn previously. The following parts are different:

USB entry (J1)

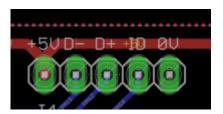


This header supplies +5V, 0V, USB data and the ID state. Normally it will be connected to the USB module by a short cable.

Extended port (J16E)

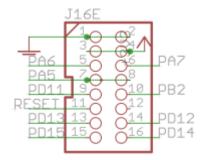

The original J16 functionality is preserved, but extra pins are available on an IDC16 header. These include the Reset signal and pins normally controlling LEDs. This header is normally connected to the RES-SD module.

User button (JPA0)

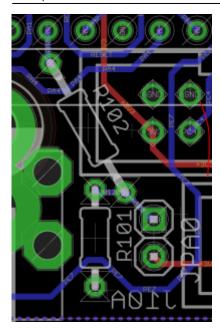

This jumper replaces the "bootloader" functionality of the Discovery board's blue button. It could be wired to an external panel control if needed.

BOM v1.0

Туре	Qty	Value	Package	Parts	Mouser	Reichelt	Conrad	Other	Notes
Resis	tors								
	2	220R 5%	THT	R7A, R8A					
	2	220R 5%	1206	R7B, R8B					
	1	330R 5%	THT	R102					
	4	1k 5%	1206	R7B1-4					
	2	1k 5%	THT	R11, R13					
	1	10k 5%	THT	R12					
	1	220k 5%	THT	R101					
Pots			'	'					
	2	10k	6*5mm vert	P1, P2					
Сара	citor	S	<u>'</u>	'					
	3	100n	1206	C1A, C1B, C2					
Diode	es		'	'	,				
	1	1N4148	THT	as marked					
Trans	sisto	rs							
	1	BC337	TO-92	T1					
ICs									
	2	74HCT125	SOIC	IC1A, IC1B	595-SN74HCT125DR				Ensure HCT
	1	74HC595	SOIC	IC2					
Head	ers	•							

2025/12/13 09:55 3/4 wCoreF4 PCB

Туре	Qty	Value	Package	Parts	Mouser	Reichelt	Conrad	Other	Notes
Resis	stors								
	2	1*2	male						
	1	1*3	male						
	1	1*5	male	J1					or wire directly
	9	2*5	male						
	3	2*8	male						
	2	2*25	female						
Hard	ware	•				·			
	4		M3 spacer	8mm(?)					
MCU	brea	kout		•					
	1	Waveshare Core 407v							

Versions

v1.0: first release.


Assembly

The following build order is suggested:

- R7B1-4 (1k) and located near J15 S on the top side
- R7B and R8B (220R) on the bottom side
- C1A, C1B and C2 on the bottom side
- IC1A, IC1B and IC2 on the bottom side
- Top-side THT components
- Bottom-side THT components
- Bottom-side IPA0 header
- Bottom-side 2*25 pin female headers
- Top-side male headers, except for J1
- Solder J1 in conjunction with the USB module
- · Mounting brackets if needed

Connecting the Core407v breakout

• Checking the Waveshare board, you will see that there is a real-time clock crystal and associated caps connected across PC14 and PC15. I think it's best to remove these parts so they don't interfere with normal operation. Clip the leads of the crystal and desolder the part if you like. The caps should come off quite easily with a soldering iron tip heating both pads.

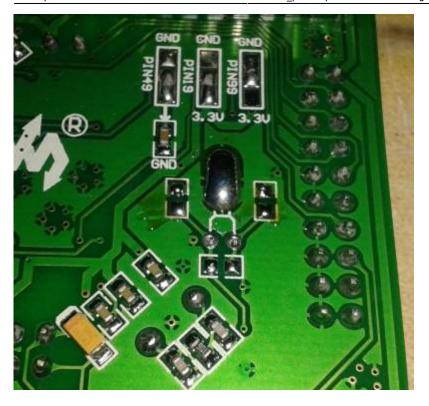

- Looking at the top side of the PCB (with all headers etc.) and J1 at the "northern" edge, the Core 407v board plugs in on the bottom side with the JTAG header towards the right
- Remove the OTG jumpers "FLG," "VBUS" and "PWR OUT." USB won't work properly with these closed.
- I believe that the correct state of the BOOT CONFIG switch should be set to "SYSTEM"
- There's another switch to select the +5V power. It should be set to "USB" when flashing the board using the USB mini connector as a power source, but for our purposes set it to "PWR 5V".

License

Currently the design is © 2016 antilog devices with all rights reserved; all documentation is CC BY-NC-SA 3.0.

From:

http://www.midibox.org/dokuwiki/ - MIDIbox

Permanent link:

http://www.midibox.org/dokuwiki/doku.php?id=wcoref4 pcb&rev=1505110391

Last update: **2017/09/11 06:13**

