


# SEQv4+ Jog module

A BLM using 18 illuminated MEC switches placed around an encoder (datawheel). Two spare DIN pins can accommodate a footswitch and a modular gate.

## Schematic

The circuit is a BLM, but only four DIN columns are used. The other four DIN pins scan an encoder and two inputs intended as footswitch/gate. Standard SRIO in on J89 and chained out on J89A.

The BLM is as follows:

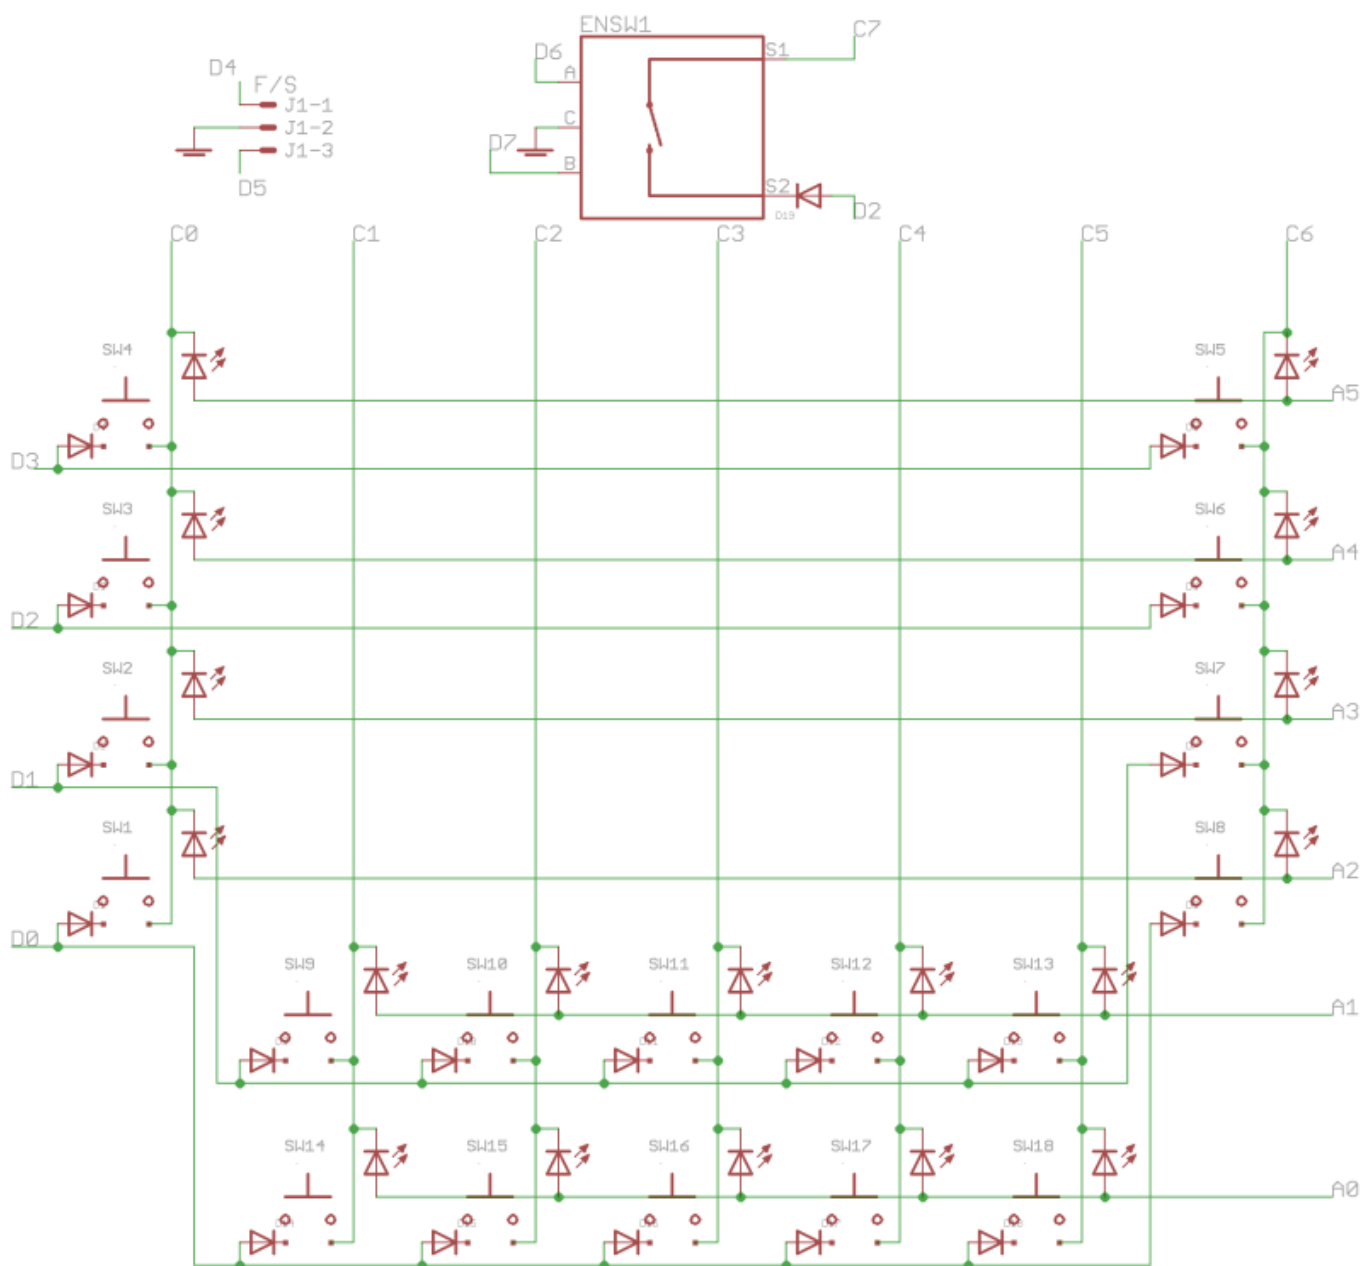

Note the encoder connected to pins D7 and D6, and header J1 connected directly to D5 and D4. All of the cathode rows are used, even C7 just for the encoder push switch.

Only six DOUT anode columns are used. These are current limited by resistors R1-6.

## BOM v1.0

Type	Qty	Value	Package	Parts	Mouser	Reichelt	Conrad	Other	Notes
<b>Resistors</b>									
	6	100-220R 5%	THT	R1-6					
<b>Resistor network</b>									
	1	10k	SOM16	RN1	4816P-T02-103LF				
<b>Capacitors</b>									
	3	100n	1206	C1-3					
<b>Diodes</b>									
	19	1N4148	THT						
<b>LEDs</b>									
	18	various	3mm						insert into switches
<b>ICs</b>									
	1	74HC165	SOIC16	IC2	595-SN74HC165DR				
	2	74HC595	SOIC16	IC1, IC3					
<b>Encoder</b>									
	1	STEC12				STEC12E08			
<b>Switches</b>									
	18	MEC/APEM	3FTH9	SW1-18	642-3FTH9	TASTER 3FTH9	705276 - 62		
<b>Headers</b>									
	1	1*3	male						
	2	2*5	male						
<b>Hardware</b>									
	6	M3 spacer	TBD						
	1	datawheel	DK-38?						
	0	switchcaps	22.5mm		642-1S11-22.5		1S11-22.5		original parts, when using taller jogwheel. See next line
	18	switchcaps	19mm		642-1S11-19.0		1S11-19.0		waiting on case, but probably the 19mm caps will be used here too

## Versions


v1.0: first release.

## Assembly

Start with the SMT parts (caps, ICs and RN), then the resistors and diodes with correct polarity. Headers, switches (read below first!), encoder, caps and knobs.

**Important:** insert the LEDs into the switches before soldering them! It's quite hard to bend the legs once the switches are in place. The LED legs should not interfere with the switch action; i.e. the button should be pressed and released without getting caught on the legs.

Ensure that when the switch is soldered in, the LED is correctly polarised. Round part (anode) of the LED to the circled pin; flat part (cathode) to the line:

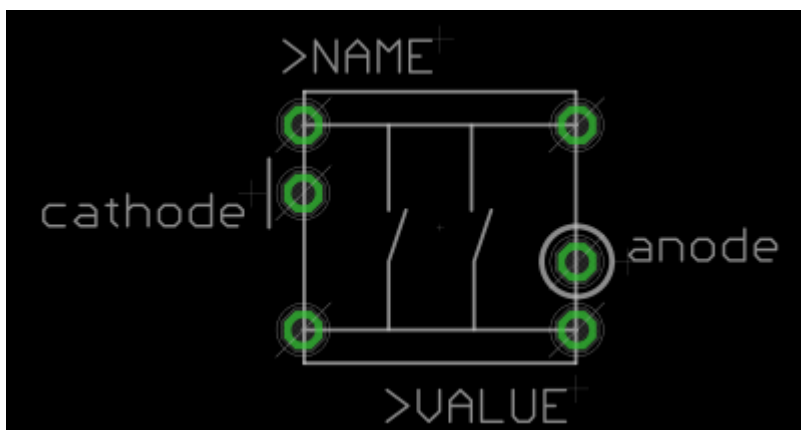

## License

Currently the design is © 2017 antilog devices with all rights reserved; all documentation is CC BY-NC-SA 3.0.

From:  
<https://www.midibox.org/dokuwiki/> - **MIDIbox**

Permanent link:  
[https://www.midibox.org/dokuwiki/doku.php?id=seqv4plus\\_jog&rev=1511200160](https://www.midibox.org/dokuwiki/doku.php?id=seqv4plus_jog&rev=1511200160)

Last update: **2017/11/20 17:49**

